



EXPLODED PARTS LIST | 18





Multitool HYMT5080

HYUNDAI
POWER PRODUCTS





WWW.HYUNDAIPOWER.ES

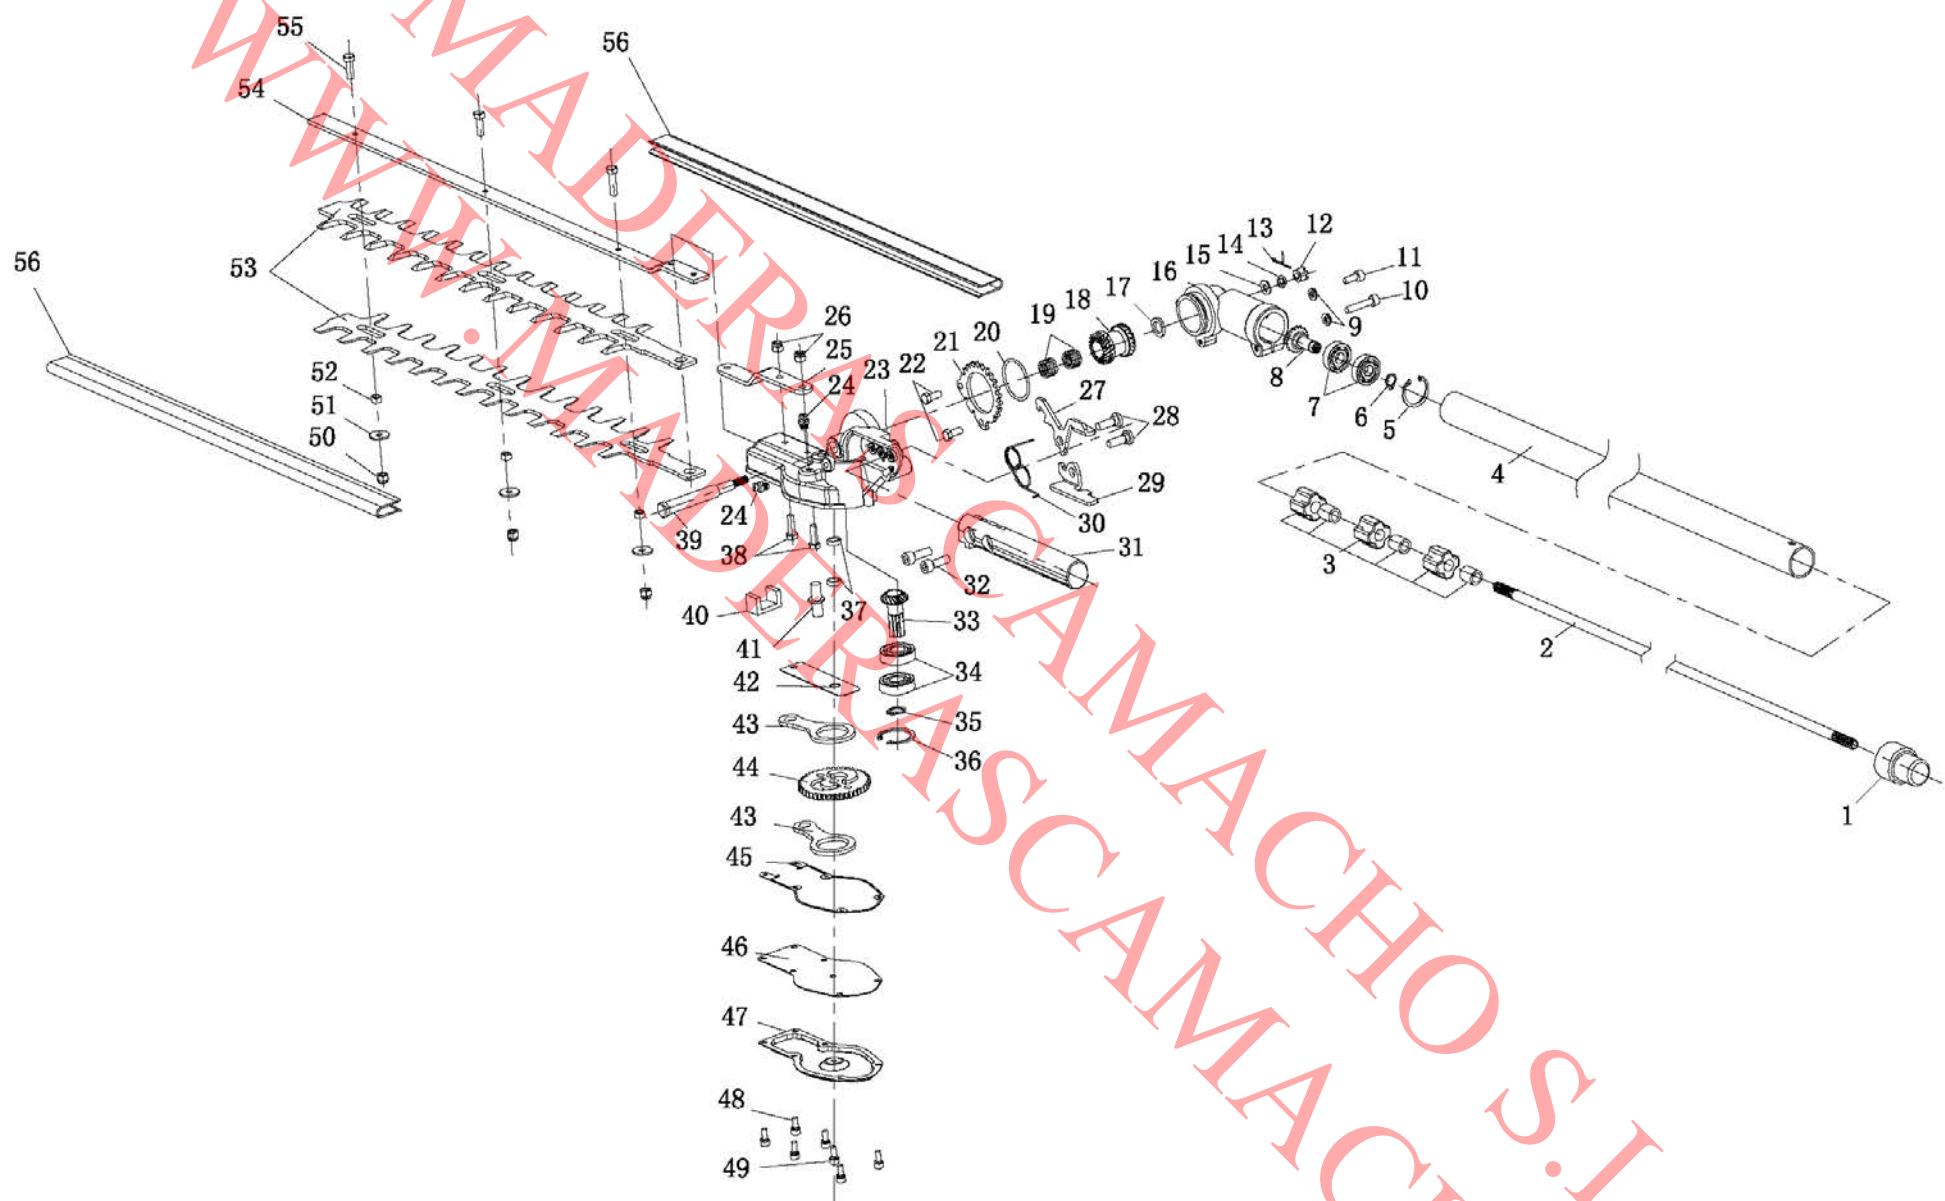

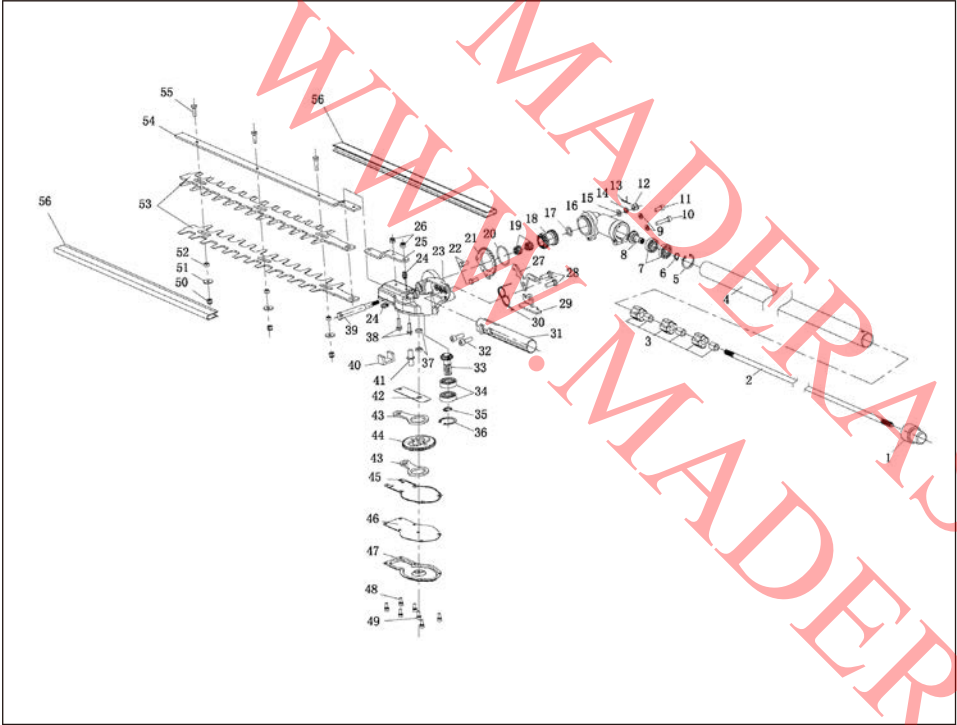



POS	REFERENCIA	DESCRIPCIÓN	DESCRIPTION
1	SP-MTHT5080-1	Goma protección barra	Cap for protection
2	SP-MTHT5080-2	Eje transmisión	Transmission
3	SP-MTHT5080-3	Cojinetes goma transmisión	Oil sleeves
4	SP-MTHT5080-4	Barra aluminio transmisión	Tube
5	SP-MTHT5080-5	Clip 24	Snap ring 24
6	SP-MTHT5080-6	Clip 9	Snap ring 9
7	SP-MTHT5080-7	Cojinete 6000	Bearing 6000
8	SP-MTHT5080-8	Cabeza transmisión	Bevel gear
9	SP-MTHT5080-9	Arandelas de bloqueo 5	Spring washer 5
10	SP-MTHT5080-10	Tornillo M5X25	Screw M5X25
11	SP-MTHT5080-11	Tornillo M5X12	Screw M5X12
12	SP-MTHT5080-12	Tornillo M6	Nut M6
13	SP-MTHT5080-13	Pasador 2.0	Splitpin 2.0
14	SP-MTHT5080-14	Arandela de bloqueo 6	Spring washer 6
15	SP-MTHT5080-15	Arandela 6	Washer 6
16	SP-MTHT5080-16	Cuerpo transmisión	Side cover for gear box
17	SP-MTHT5080-17	Arandela 10	Washer 10
18	SP-MTHT5080-18	Piñones transmisión	Roller gear
19	SP-MTHT5080-19	Cojinetes transmisión	Needle bearing
20	SP-MTHT5080-20	Junta torica	Rubber ring
21	SP-MTHT5080-21	Angulo de ajuste	Angle-adjusting gear
22	SP-MTHT5080-22	Tornillo M5X12	Screw M5X12
23	SP-MTHT5080-23	Caja transmisión	Gear box
24	SP-MTHT5080-24	Tornillo de engrase	Oil mouth
25	SP-MTHT5080-25	Anclaje cuchillas a caja	Connector plate
26	SP-MTHT5080-26	Tornillo M5	Screw M5
27	SP-MTHT5080-27	Fijador angulo de ajuste	Located plate
28	SP-MTHT5080-28	Tornillo M6X15	Screw M6X15
29	SP-MTHT5080-29	Base fijador angulo	Located plate seat
30	SP-MTHT5080-30	Muelle de torsión	Located plate sorsional spring
31	SP-MTHT5080-31	Barra caja transmisión	Hand grip
32	SP-MTHT5080-32	Tornillo M6X18	Screw M6X18
33	SP-MTHT5080-33	Eje dentado transmisión	Transmission gear
34	SP-MTHT5080-34	Cojinete 6001	Bearing 6001
35	SP-MTHT5080-35	Clip 12	Snap ring 12
36	SP-MTHT5080-36	Clip 28	Snap ring 28
37	SP-MTHT5080-37	Casquillos espaciadores	Positioning ring
38	SP-MTHT5080-38	Tornillo M5X16	Screw M5X16
39	SP-MTHT5080-39	Tornillo	Screw
40	SP-MTHT5080-40	Base cuchilla inferior	Wool felt
41	SP-MTHT5080-41	Arandela	Washer
42	SP-MTHT5080-42	Tornillo	Bolt
43	SP-MTHT5080-43	Biela transmisión	Connecting rod
44	SP-MTHT5080-44	Piñon excéntrico	Eccentric gear
45	SP-MTHT5080-45	Junta caja transmisión	Sealing gasket
46	SP-MTHT5080-46	Sellado caja transmisión	Sealing cap
47	SP-MTHT5080-47	Tapa inferior caja transmisión	Bottom cap
48	SP-MTHT5080-48	Tornillo M4x10	Screw M4X10
49	SP-MTHT5080-49	Tornillo M4x12	Screw M4X12
50	SP-MTHT5080-50	Tuerca bloqueo M5	Locknut M5
51	SP-MTHT5080-51	Arandela 5	Washer 5
52	SP-MTHT5080-52	Casquillo 5	Liner 5
53	SP-MTHT5080-53	Cuchillas	Blade
54	SP-MTHT5080-54	Guia superior cuchillas	Layering
55	SP-MTHT5080-55	Tornillo M5X16	Screw M5X16
56	SP-MTHT5080-56	Protector cuchillas	Blade protector

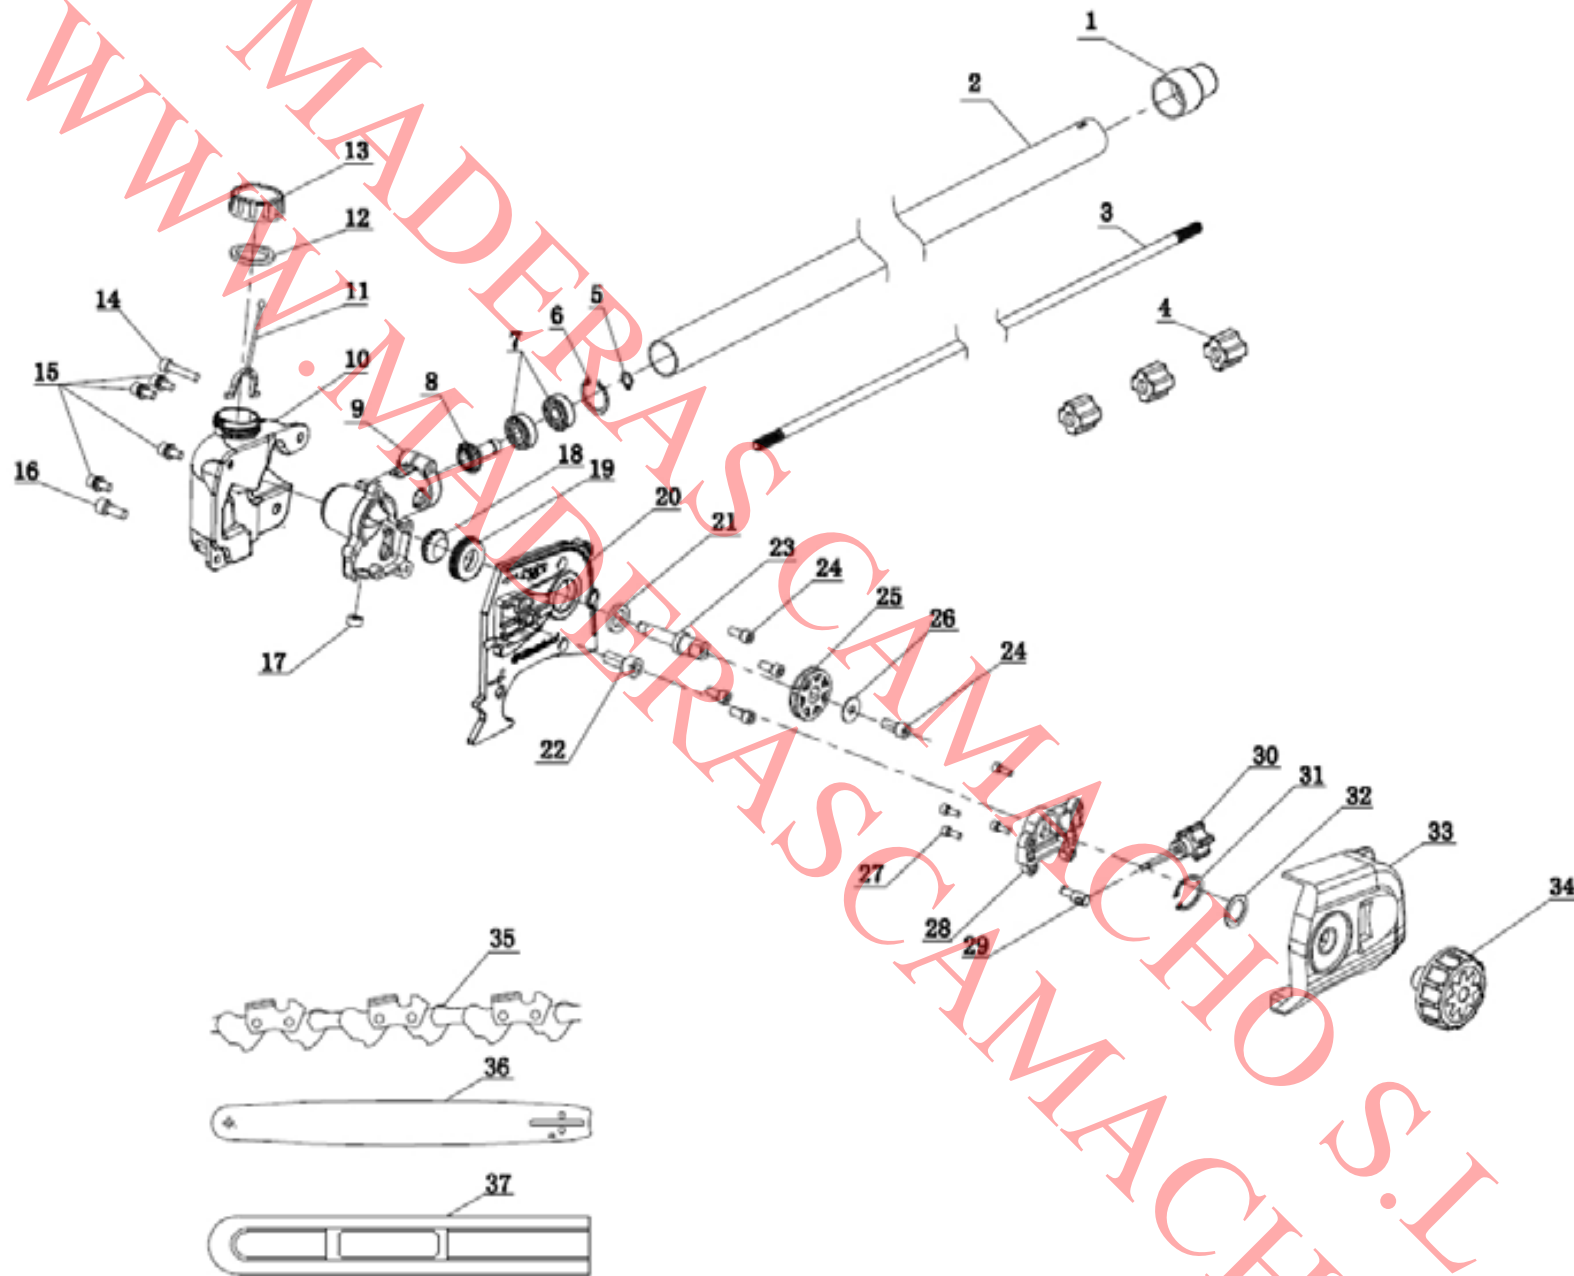

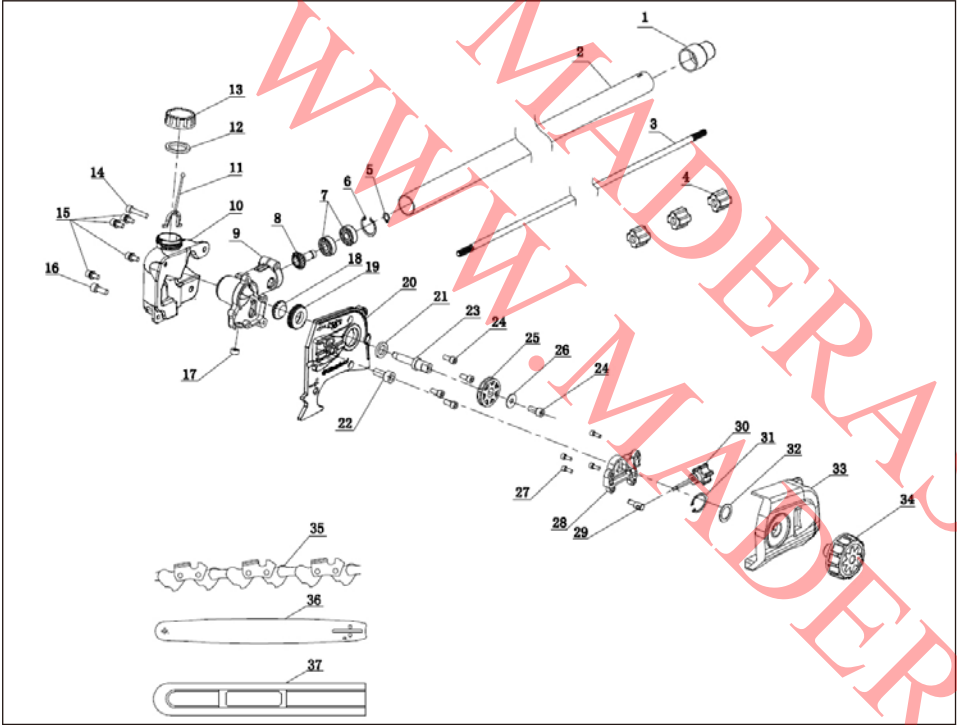



POS	REFERENCIA	DESCRIPCIÓN	DESCRIPTION
1	SP-MTPS5080-1	Goma protección barra	Cap
2	SP-MTPS5080-2	Barra transmisión	Tube
3	SP-MTPS5080-3	Eje dentado transmisión	Transmission
4	SP-MTPS5080-4	Gomas antivibración barra	Oil sleeves
5	SP-MTPS5080-5	Clip 9	Snap ring 9
6	SP-MTPS5080-6	Clip 26	Snap ring 26
7	SP-MTPS5080-7	Cojinete 6000	Bearing 6000
8	SP-MTPS5080-8	Piñon	Gear
9	SP-MTPS5080-9	Cuerpo transmisión	Gear box
10	SP-MTPS5080-10	Depósito de Aceite	Oil tank
11	SP-MTPS5080-11	Fijador tapón	Anti-drop plate
12	SP-MTPS5080-12	Junta tapón	Oil seal
13	SP-MTPS5080-13	Tapón depósito aceite	Oil tank cap
14	SP-MTPS5080-14	Tornillo M5X25	Screw M5X25
15	SP-MTPS5080-15	Tornillo M5X12	Screw M5X12
16	SP-MTPS5080-16	Tornillo M6X16	Screw M6X16
17	SP-MTPS5080-17	Esponja	Dust sponge
18	SP-MTPS5080-18	Piñon	Drum
19	SP-MTPS5080-19	Retén	Worm gear
20	SP-MTPS5080-20	Tapadera caja bomba aceite	Side cover of gear box
21	SP-MTPS5080-21	Arandela	Washer
22	SP-MTPS5080-22	Tornillo M6X22	Screw M6X22
23	SP-MTPS5080-23	Eje principal caja transmisión	Output shaft
24	SP-MTPS5080-24	Tornillo M5X12	Screw M5X12
25	SP-MTPS5080-25	Piñon cadena	Sprocket
26	SP-MTPS5080-26	Arandela 6x20	Washer 6X20
27	SP-MTPS5080-27	Tornillo ST4X12	Screw ST4X12
28	SP-MTPS5080-28	Bomba engrase	Dial wheel cover
29	SP-MTPS5080-29	Tensor cadena	Tension screw
30	SP-MTPS5080-30	Tornillo rápido de tensado	Dial wheel
31	SP-MTPS5080-31	Clip 16	Snap ring 16
32	SP-MTPS5080-32	Arandela	Washer
33	SP-MTPS5080-33	Tapa	Cover
34	SP-MTPS5080-34	Tornillo Rápido	Nut
35	SP-MTPS5080-35	Cadena	Chain
36	SP-MTPS5080-36	Espadín	Bar
37	SP-MTPS5080-37	Funda espadín	Bar protector

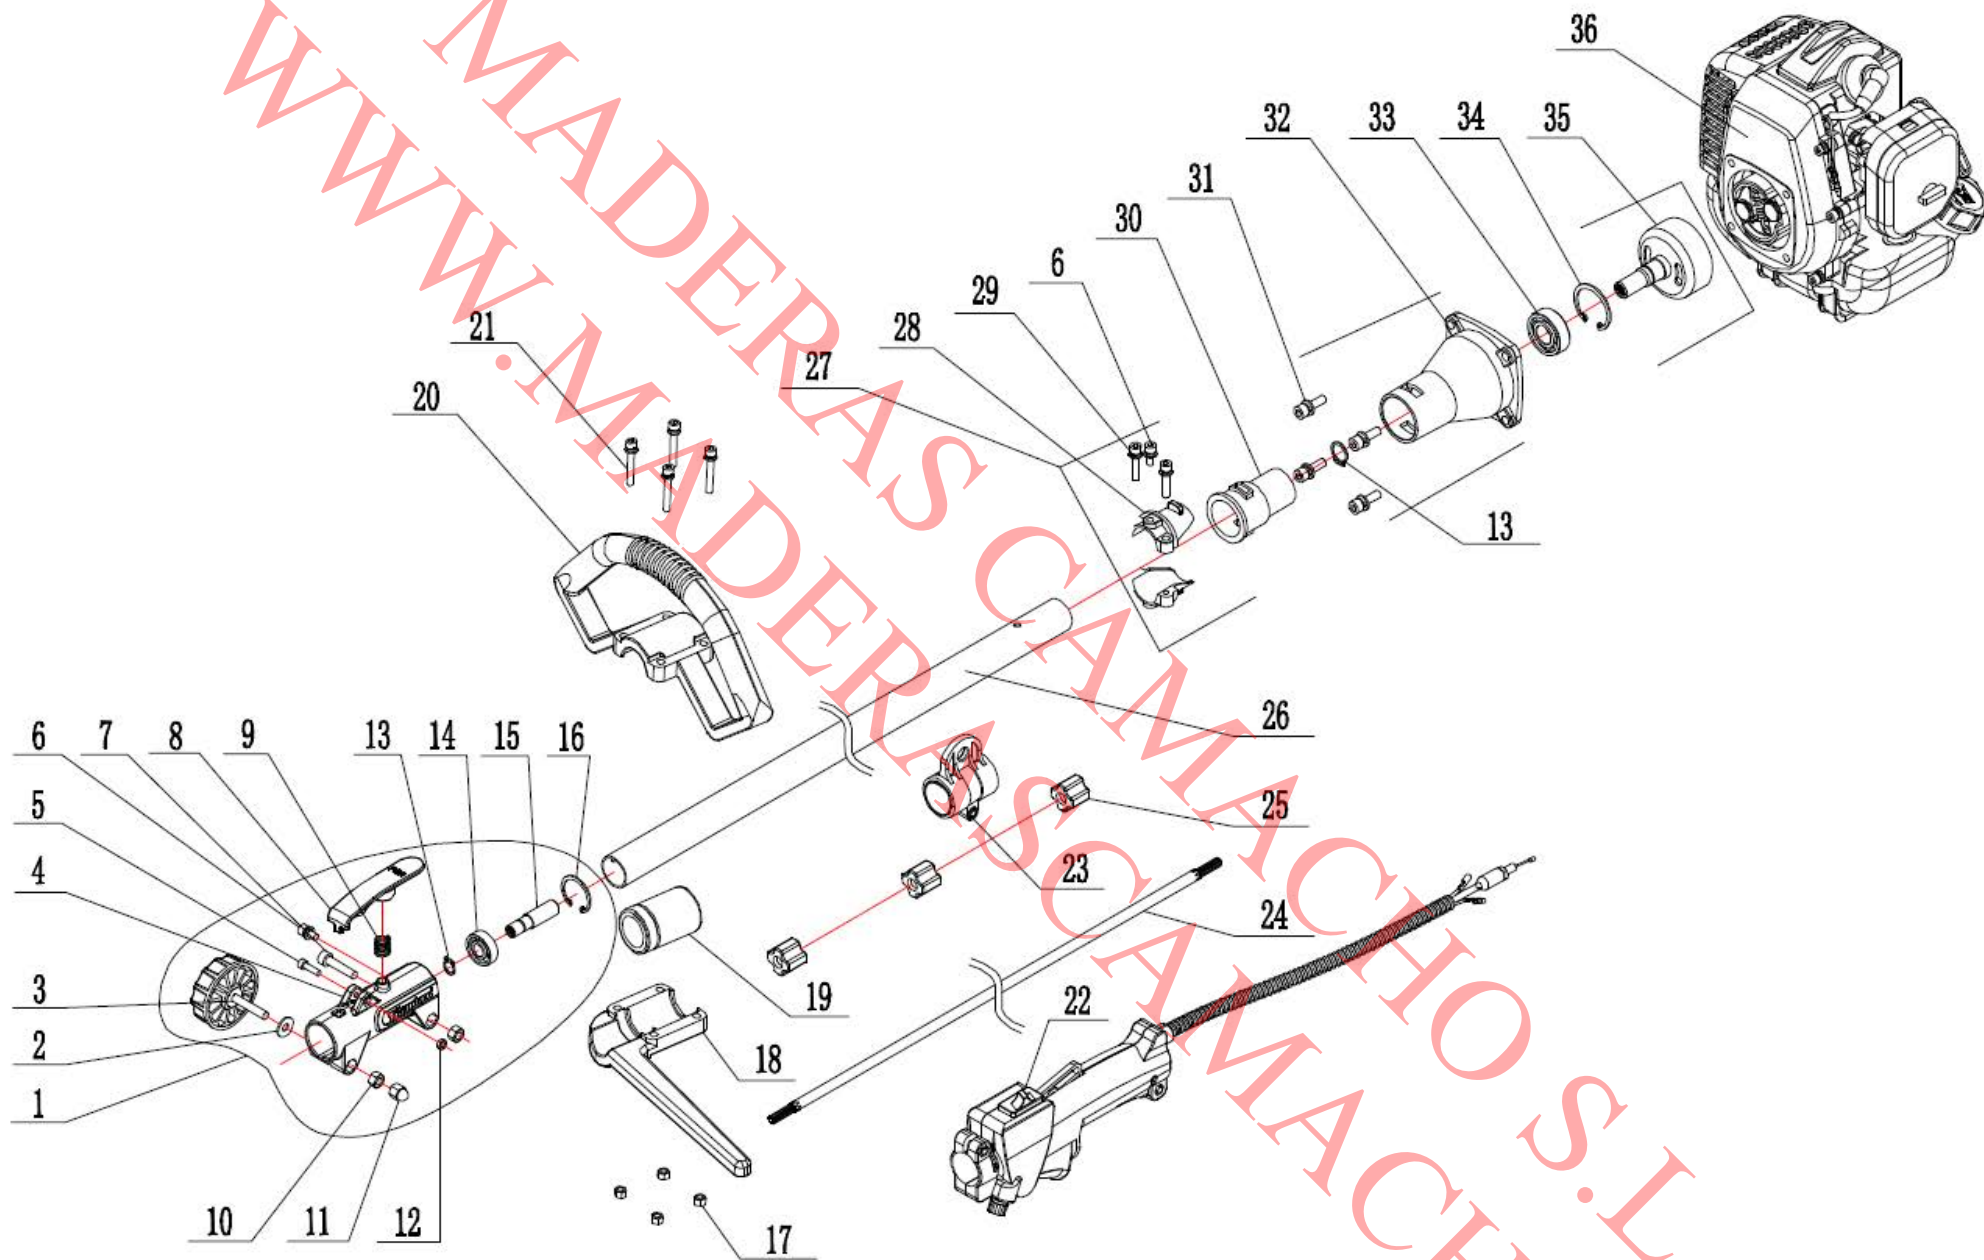

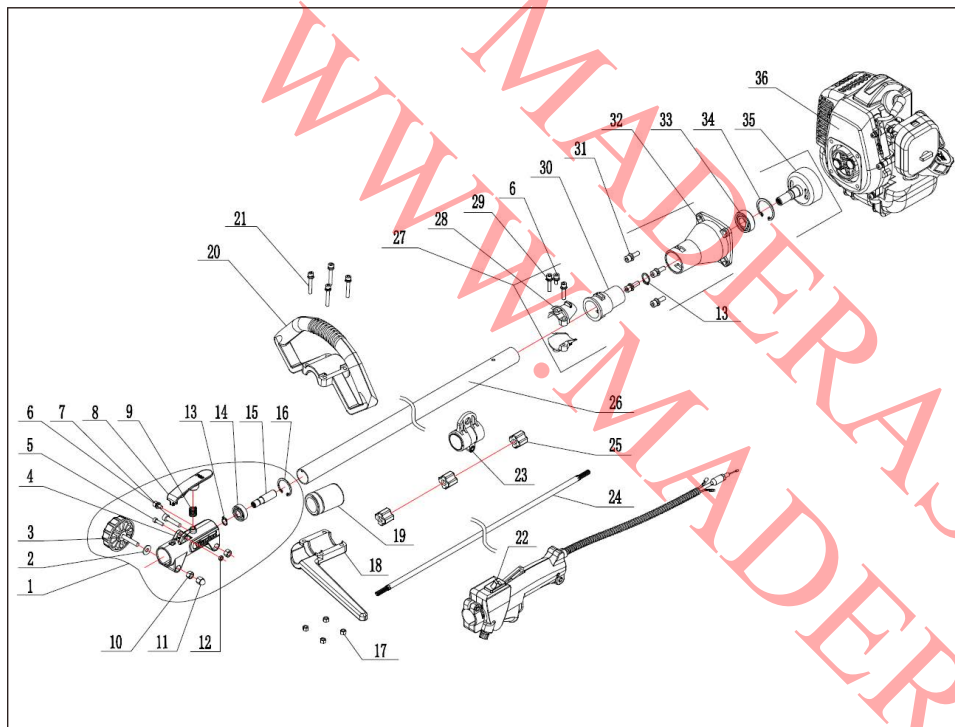

POS	REFERENCIA	DESCRIPCIÓN	DESCRIPTION
1	SP-MT5080-S1	Conjunto conexión barras	Joint connector
2	SP-MT5080-S2	Arandela Ø6XØ12X1,5	Washer Ø6XØ12X1,5
3	SP-MT5080-S3	Tornillo Rápido	Lock nut
4	SP-MT5080-S4	Cuerpo conector rápido	Connector
5	SP-MT5080-S5	Tornillo M4X16	Screw M4X16
6	SP-MT5080-S6	Tornillo M5X12	Screw M5X12
7	SP-MT5080-S7	Tornillo m6x30	Combination screw M6X30
8	SP-MT5080-S8	Palanca ajuste	Plate
9	SP-MT5080-S9	Muelle	Spring
10	SP-MT5080-S10	Tuerca M6	Nut M6
11	SP-MT5080-S11	Tapón tuerca M6	Cap nut M6
12	SP-MT5080-S12	Tuerca M4	Nut M4
13	SP-MT5080-S13	Clip Ø10	Ring Ø10
14	SP-MT5080-S14	Cojinete 6000	Bearing 6000
15	SP-MT5080-S15	Entrada eje dentado	Sleeve for connecting
16	SP-MT5080-S16	Clip Ø26	Ring for hole Ø26
17	SP-MT5080-S17	Tuerca M5	M5 nut
18	SP-MT5080-S18	Soporte inferior manillar	P handle part
19	SP-MT5080-S19	Goma soporte manillar	P handle damping
20	SP-MT5080-S20	Manillar	P handle part
21	SP-MT5080-S21	Tornillo M5X35	M5X35 screw
22	SP-MT5080-S22	Mando acelerador completo	Oil control
23	SP-MT5080-S23	Abrazadera Arnes	Ring for harness
24	SP-MT5080-S24	Eje transmisión	Transmission
25	SP-MT5080-S25	Cojinetes goma transmision	Bearings
26	SP-MT5080-S26	Barra aluminio transmision	Shaft tube
27	SP-MT5080-S27	Conjunto abrazadera barra	Hosing assy
28	SP-MT5080-S28	Abrazadera barra	Splint
29	SP-MT5080-S29	Tornillo M5X25	Screw M5X25
30	SP-MT5080-S30	Antivibración protector campana embrague	Damping sleeve
31	SP-MT5080-S31	Tornillo M6X18	Screw M6X18
32	SP-MT5080-S32	Protector campana embrague	Hosing
33	SP-MT5080-S33	Cojinete 6202	Bearing 6202
34	SP-MT5080-S34	Clip Ø35	Ø35 Spring for hole
35	SP-MT5080-S35	Campana embrague	Drum
36	SP-MT5080-S36	Motor	Engine

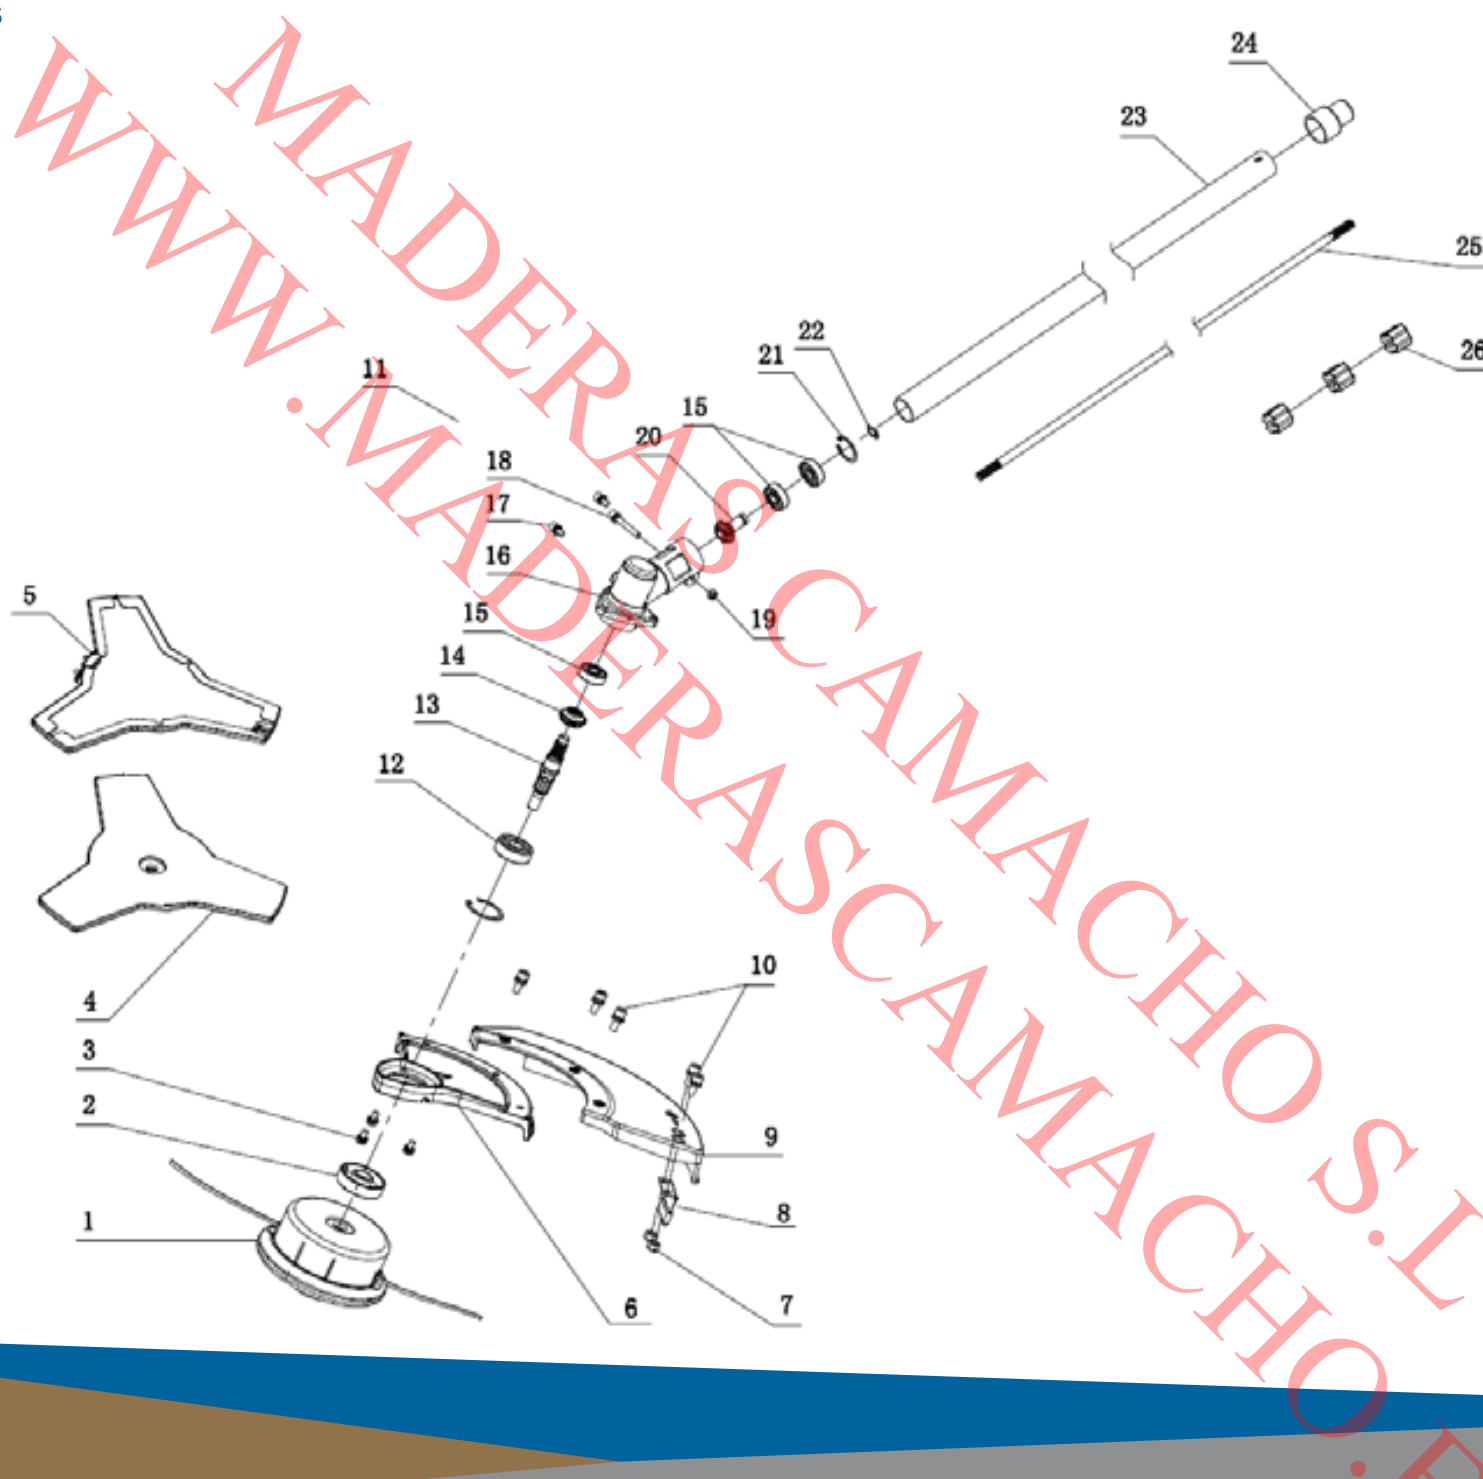

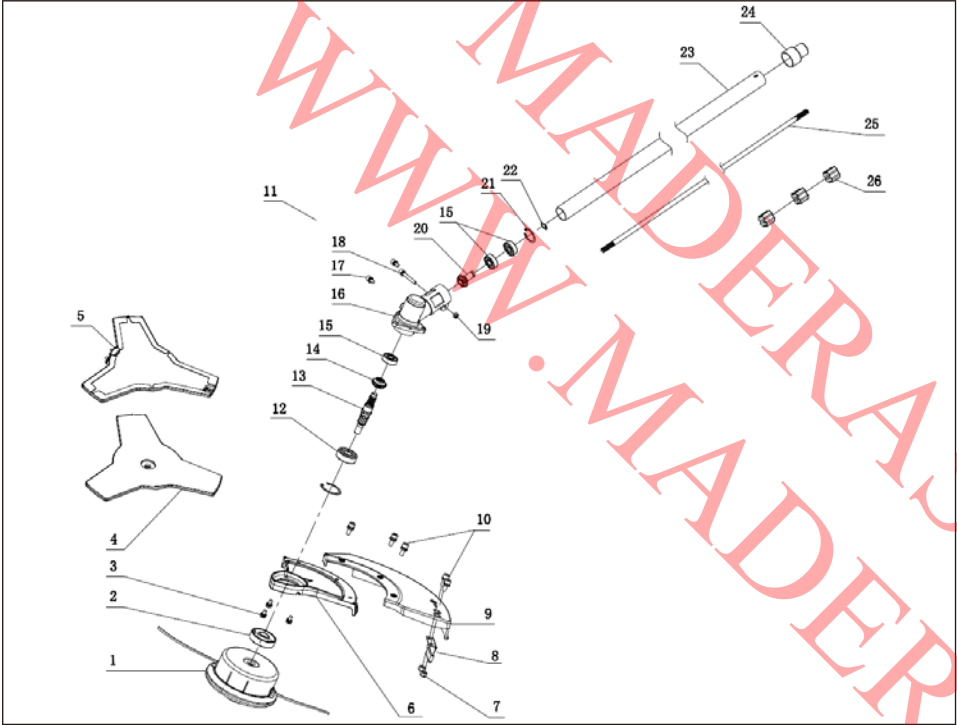

POS	REFERENCIA	DESCRIPCIÓN	DESCRIPTION
1	SP-MT5080-1	Bobina Nylon	Nylon Head
2	SP-MT5080-2	Arandela estriada superior	Down Pressing Cover
3	SP-MT5080-3	Tornillo M5X10	M5X10 Screw
4	SP-MT5080-4	Disco 3 puntas	3T Blade
5	SP-MT5080-5	Protector disco 3 puntas	Protector of 3T blade
6	SP-MT5080-6	Protector metalico disco	Backing Plate
7	SP-MT5080-7	Tornillo M6	M6 Screw
8	SP-MT5080-8	Cuchilla corta hilo	Knife
9	SP-MT5080-9	Protector plastico Bobina	Debris Protector
10	SP-MT5080-10	Tornillo M6X15	M6X15 Screw
11	SP-MT5080-11	Cabezal transmisión completo	Assembly
12	SP-MT5080-12	Cojinete 6202	Bearing 6202
13	SP-MT5080-13	Eje interior cabezal	Spline Shaft
14	SP-MT5080-14	Piñon cabezal	Drum Gear
15	SP-MT5080-15	Cojinete 6000	Bearing 6000
16	SP-MT5080-16	Cuerpo cabezal transmisión	Gear Box
17	SP-MT5080-17	Tornillo M5X10	Screw M5X10
18	SP-MT5080-18	Tornillo M5X32	Screw M5X32
19	SP-MT5080-19	Tornillo M5	Nut M5
20	SP-MT5080-20	Piñon eje cabezal	Driving Gear
21	SP-MT5080-21	Clip 26	Snap Ring 26
22	SP-MT5080-22	Clip 10	Snap Ring 10
23	SP-MT5080-23	Barra aluminio transmisión	Shaft Tube
24	SP-MT5080-24	Protector barra aluminio	Cap
25	SP-MT5080-25	Eje dentado transmisión	Transmission
26	SP-MT5080-26	Cojinetes goma transmision	Oil Sleeves

WWW.MADERASCAMACHO.COM

HYUNDAI
POWER PRODUCTS



WWW.HYUNDAIPOWER.ES

